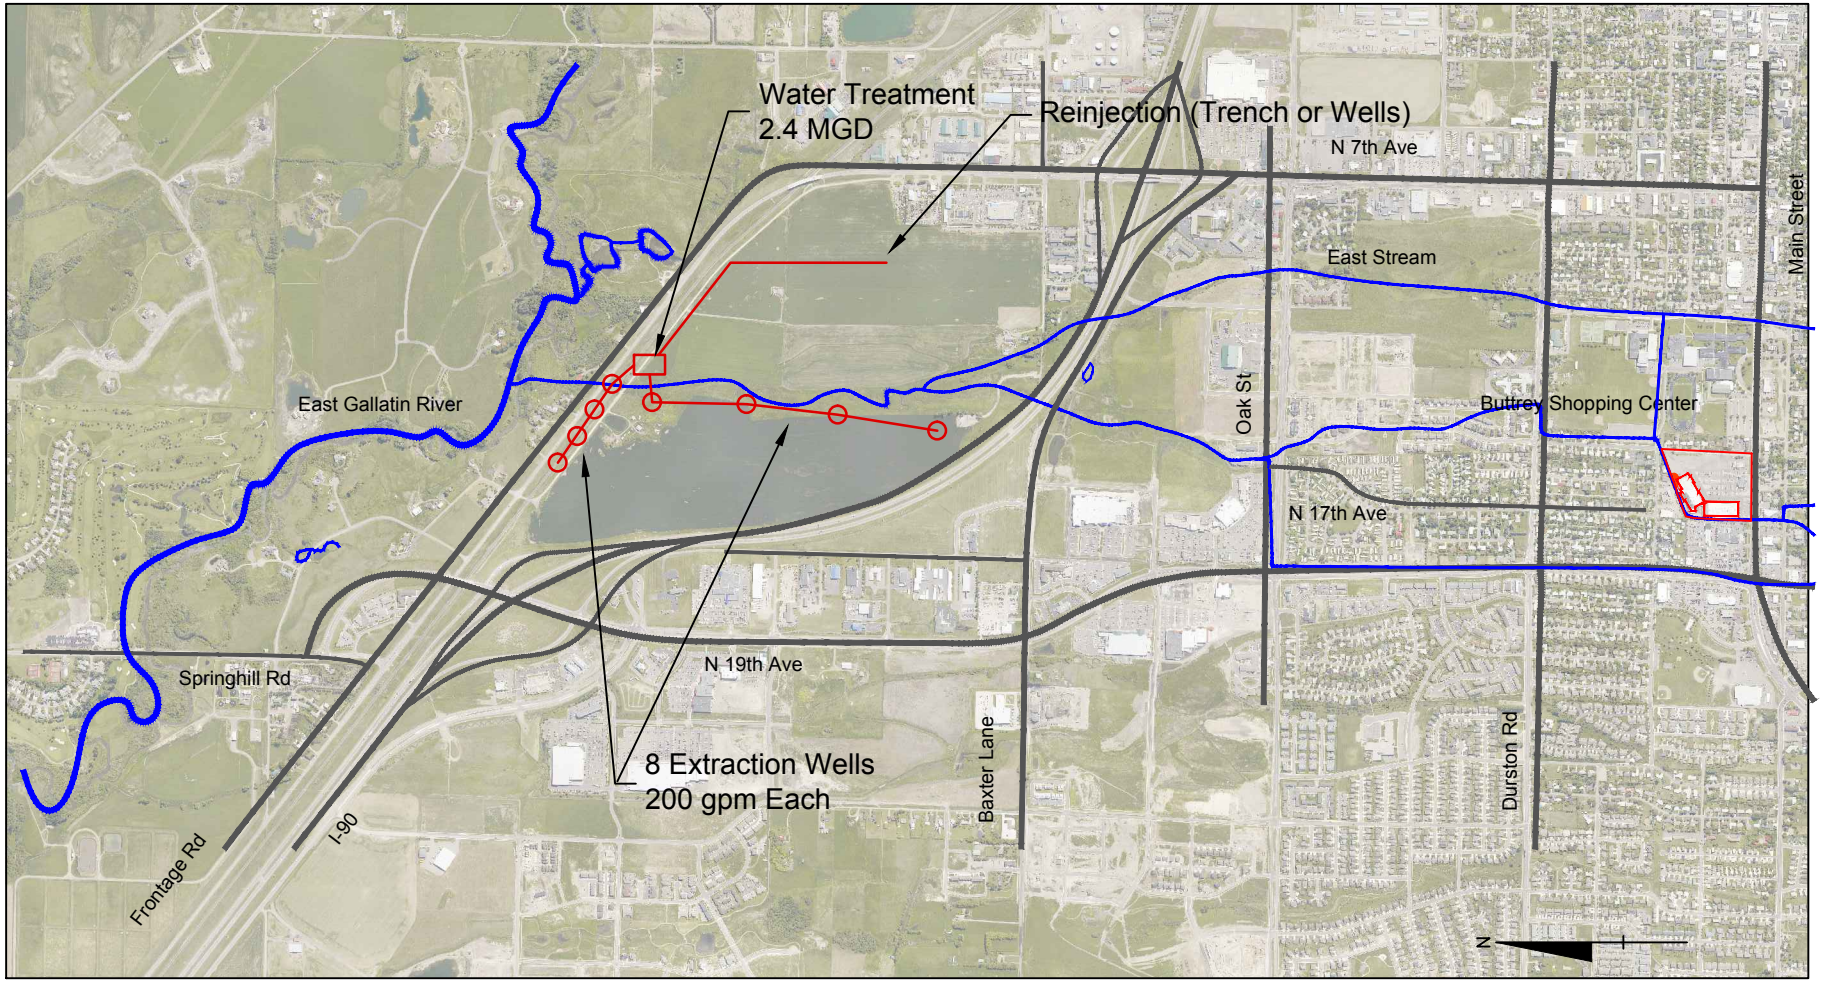


Note:
Actual number and spacing of pumping wells will be determined during remedial design based on remedial design evaluations.

SCALE
0 2000 FEET

| | | | |
|---|---|---|---|
| From: NE & W, 2011d | NICKLIN EARTH & WATER, INC. | Alternative 13 - Pump & Treat<br>Bozeman Solvent Site | Figure 23 |